

Panasonic USB Audio Driver 2 Installation Guide

Windows Operating System must be updated to install the Panasonic USB Audio Driver 2.

Precautions before installation: install the dedicated driver software before connecting the computer by USB.



 
ASIO is a trademark and software of Steinberg Media Technologies GmbH.

Windows is a trademark or a registered trademark of Microsoft Corporation in the United States and/or other countries.


Any other company names, product names and logos in this document are the trademarks or registered trademarks of their respective owners.

Driver installation procedures


1. First, unzip Panasonic USB Audio Driver 2 Ver.1.0.1.1Technics.zip that is distributed as a compressed archive file.
2. If using a 32-bit operating system, double-click the Panasonic_USB_Audio_2_32.exe file in the folder that opened in step 1 to open the installation wizard.
If using a 64-bit operating system, double-click the Panasonic_USB_Audio_2_64.exe file in the folder that opened in step 1 to open the installation wizard.
If a software use confirmation pop-up dialog opens, click [Run] or [Yes] to continue with installation of the driver file.
3. Click [Next].

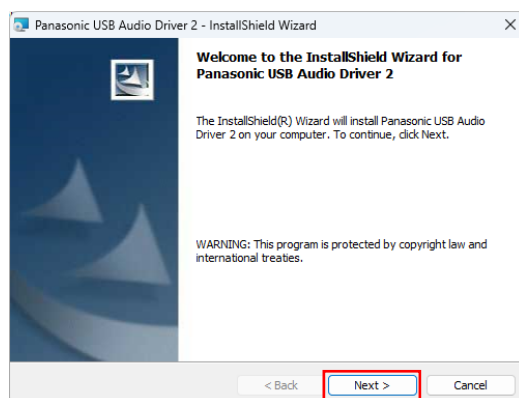

 
4. After confirming the contents of the License Agreement, select “I accept the terms in the license agreement” and click [Next].

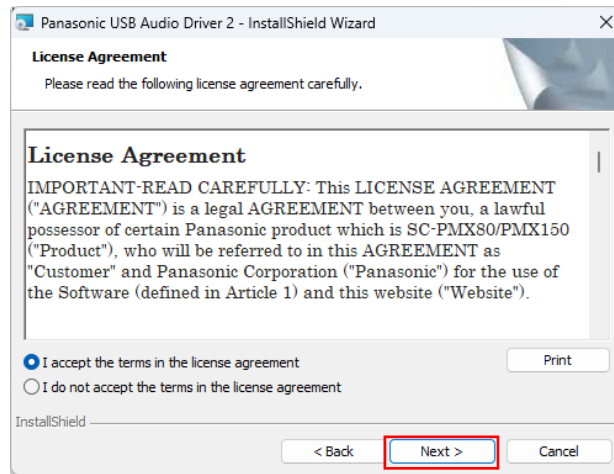

 5. Click [Install]

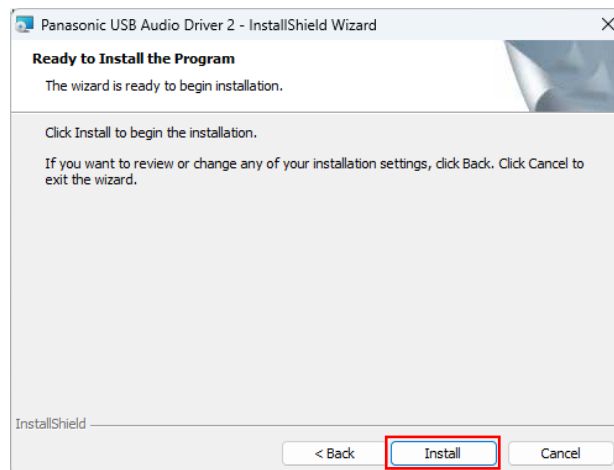

 
6. When the wizard completion dialog is displayed, click [Finish] to complete the installation.

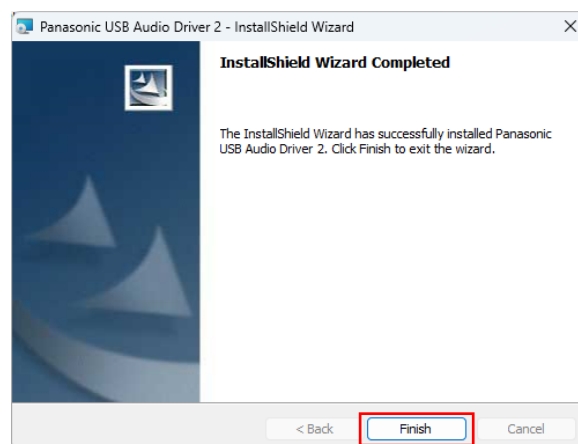

Connecting to a computer

The first time the unit is connected to one of the computer's USB ports, the driver will be detected automatically.

 If the connected unit is recognized properly, the Panasonic USB Audio 2 device will have been added as a playback device in Windows Sound Control Panel.

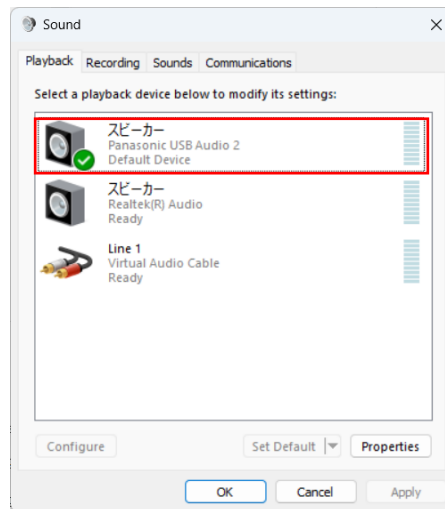

Setting the audio output device

When you open the Windows Sound Control Panel, the Panasonic USB Audio 2 device can be selected as the default device for sound playback.

 
The device selected here will be used to output Windows operation sounds and the sound of playback from Windows Media Player.

You must change the settings as follows to set the default device for sound playback

1. After selecting “Panasonic USB Audio 2” in the Sound Playback window, click [Properties].

2. Next, click the Advanced tab.

If the Default Format is set to “384000 Hz”, click the right end of this setting to open a pull-down menu and select any sampling frequency of 192000 Hz.

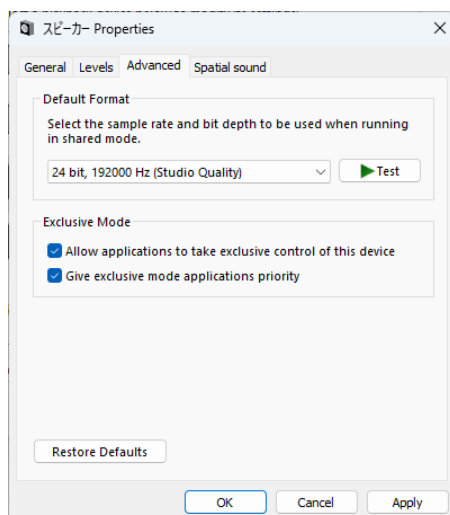

3. Click [OK] to confirm the setting.

Music playback software settings

To output audio from music playback software from this unit when connected to a computer by USB, set the sound playback device to [Panasonic USB Audio 2] in the settings of the software that you are using. See the instructions for that software for details about how to set the sound playback device.

If you only want the sound from specific software to be output from this unit, select [Panasonic USB Audio 2] in the settings of that software, but do not set [Panasonic USB Audio 2] as the Default Device for sound playback in the Windows Sound Control Panel.